

# Z-Kill Gas Engine Cut Off

**Please read all instructions to avoid damage to your Engine.**

- 8 Bit Pic Microcontroller
- DSP Noise / Loss of Signal filtering
- PPM-PCM 2048 - 1024 & Spread Spectrum
- Small size 22-Grams
- 100% surface mount
- 220 v 10 Amp relay interface
- Heavy wires

Included in package:

\*Z-Kill and Butt connectors

\*\*\*\*\*

\*Open "Switched" type radio output from your receiver\*

The Z-Kill Is Active @ 1500us / 50% stick setting

< % 50 Is RUN / OFF ( Off = Engine RUN / On = ENGINE OFF )

Setup:

White wire and Lug bolt to engine Block

Red/Yellow wire and connector go to Kill Wire on ignition coil.

Connect Radio input lead to open "Switched" channel of receiver.

Verify ON and OFF operation before using the first time.

Use a Multi-meter or you can hear the "click" of the Relay.

SAFE OFF:

If your Receiver power is "ON" But no valid signal is sensed the Z-Kill  
Is "ON" - **ENGINE WONT RUN!**

If you need Loss of signal "RUN" program in PCM to that channel to HOLD LAST Setting.

\*See attached wiring diagram for more information or your local dealer\*

\*Lifetime NO FAULT warranty simply return to us for repair or replacement\*

Contact:

42-Percent-Products


3582 Rio Pacifica

Sacramento, Ca, 95834

916-821-2635



# Z-Kill Gas Engine Cut Off

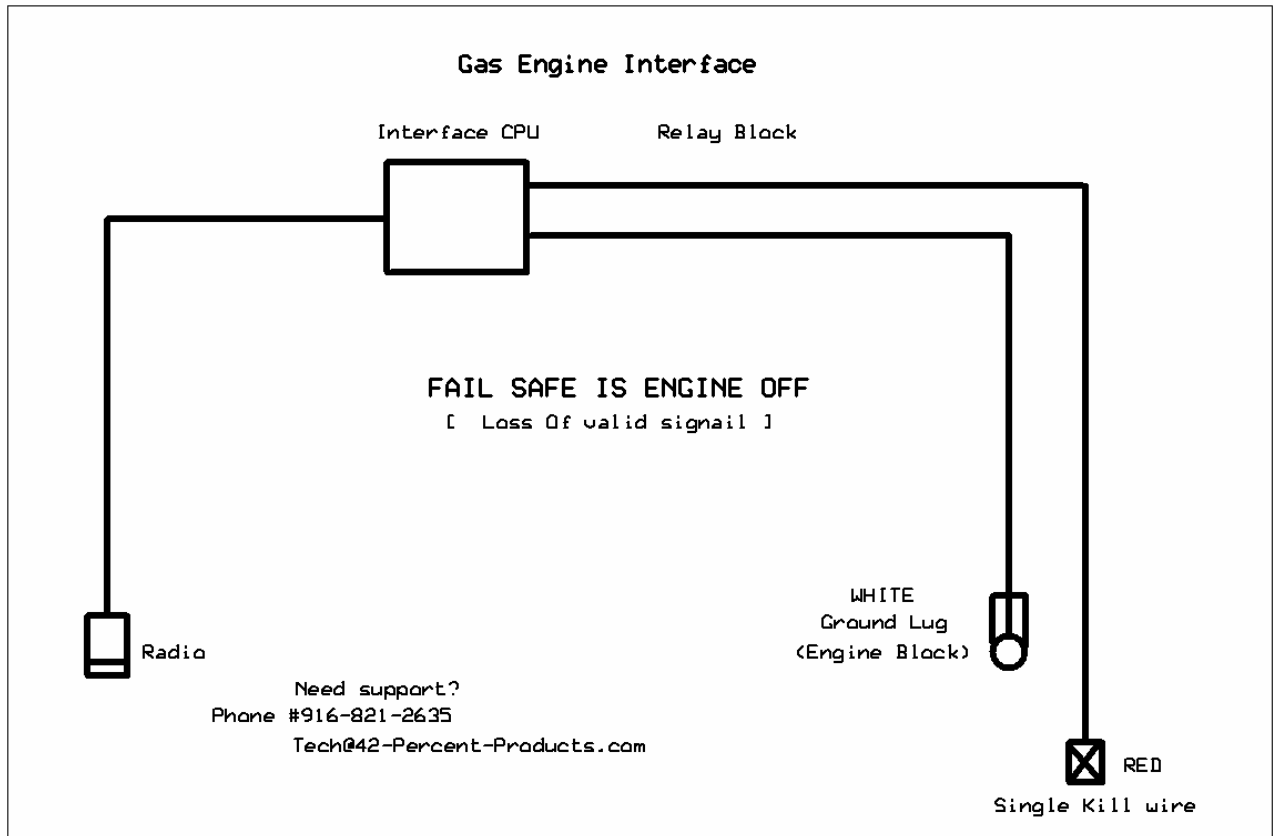

Contact:  
42-Percent-Products  
3582 Rio Pacifica  
Sacramento, Ca, 95834  
916-821-2635

